


**ORDERING
TABLE:**

Probe type TP

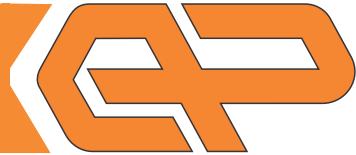

TP	X
Inserted sensor:	
Pt100 B	1
2x Pt100 B	2
Pt100 A	3
Pt1000 B	10
NTC 10K	T10
KTY 1K	81
KTY 2K	82


Example of ordering:

Code: **TP 10** means:

TP - temperature probe for measuring indoor temperature type TP
10 - inserted sensor Pt100, tolerance class B

TP - AI
Option: implementation of measuring transmitter:
Implemented current transmitter 4...20mA.
Measuring range: 0-50°C. 0°C ... 4mA 50°C ... 20mA
Supply: 24V d.c. 2-wire from current loop.

Example of ordering:

Code: **TP AI** means:

TP - temperature probe for measuring indoor temperature type TP
AI - implemented measuring transmitter 4...20mA with measuring range 0-50°C
 0°C ... 4mA
 50°C ... 20mA